



## Handlebar Assembly >

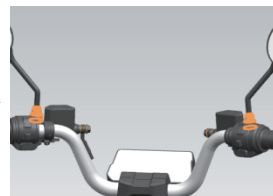

- ① Install the base with 2 pieces M8X20 hexagon socket head screws, torque 15~22N·m.
- ② Install the cover with M8X20 hexagon socket head screws, and then adjust the direction to the right angle, torque 15~22N·m.
- ③ Install the dashboard with M6X12 hexagon socket head screws, torque 6~9N·m.
- ④ Install the rearview mirrors.

## Frontwheel Assembly >

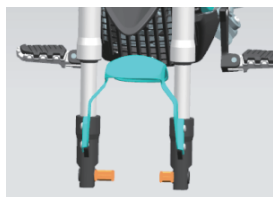

- ① Assemble the right axle sleeve (longer) first, and then the left axle sleeve (shorter).
- ② Install the front axle with M12x1.25 hexagon flange locking nut, torque 50~60N·m.
- ③ Install the front brake with M8X25 hexagon flange bolts, torque 15~22N·m.